SPLENDOR

TECHNICAL CHARACTERISTICS

- **Roll legngth** 10.05 m.
- **Roll width** 1.06 m.

Properties:

- **Washability** — **with soap and water liquid detergents and alcohol**
- **Light fastness**
- **Strippable**
- **Pattern repeat** — **nil**; **straight match**; **drop match**
- **Preparation of walls** — **walls should be perfectly dry, free from mildew and sufficiently absorbent. If too absorbent, application of fixative or pre-glueing is required.**
- **Paste the wall** — Fungicide-containing glue for non-woven wall-papers

Check the appearance of the material before cutting the roll and carry out the technical instructions given above with great care.

VISION

TECHNICAL CHARACTERISTICS

- **Roll legngth** 10.00 m.
- **Roll width** 0.70 m.

Properties:

- **Washability** — **with soap and water liquid detergents and alcohol**
- **Light fastness**
- **Strippable**
- **Pattern repeat** — **nil**; **straight match**; **drop match**
- **Preparation of walls** — **walls should be perfectly dry, free from mildew and sufficiently absorbent. If too absorbent, application of fixative or pre-glueing is required.**
- **Paste the wall** — Fungicide-containing glue for non-woven wall-papers

Check the appearance of the material before cutting the roll and carry out the technical instructions given above with great care.

TRADIZIONE ITALIANA

TECHNICAL CHARACTERISTICS

- **Roll legngth** 10.05 m.
- **Roll width** 0.53 m.

Properties:

- **Washability** — **with soap and water liquid detergents and alcohol**
- **Light fastness**
- **Strippable**
- **Pattern repeat** — **nil**; **straight match**; **drop match**
- **Preparation of walls** — **walls should be perfectly dry, free from mildew and sufficiently absorbent. If too absorbent, application of fixative or pre-glueing is required.**
- **Paste the wall** — Fungicide-containing glue for non-woven wall-papers

Check the appearance of the material before cutting the roll and carry out the technical instructions given above with great care.

Zambaiti Parati

Morelia

Zambaiti Parati S.p.A. - Via Alessandro Pertini, 2
24021 Albino (Bergamo) Italia
Tel. 035.759.111 - Telefax 035.773.169
info@zambaitiparati.com - www.zambaitiparati.com

DECLARATION OF PERFORMANCE

n. 02-2018

Unique identification code of the product-type:	VS02
Intended use:	wallcovering products in roll for internal finishes subject to reaction to fire regulation – non-woven base
Manufacturer:	Zambaiti Parati S.p.A. via A. Pertini n. 2 24021 Albino (BG) – ITALY
System/s of AVCP:	system 4
Harmonised standard:	EN 15102:2007+A1:2011
Notified body:	---

Declared performance/s:

Reaction to fire class:	D-s3, d2 (CWFT)	
Release of formaldehyde:	passed	<120 mg/kg
Release of other dangerous substances		
- of heavy metals and specific elements	Antimony	N/A mg/kg
	Arsenic	<25 mg/kg
	Barium	<500 mg/kg
	Cadmium	<25 mg/kg
	Chromium	<60 mg/kg
	Lead	<90 mg/kg
	Mercury	<20 mg/kg
	Selenium	<165 mg/kg
- of vinyl chloride monomer	passed	<0.2 mg/kg
Sound absorption:	NPD	
Thermal resistance:	NPD	

The performance of the product identified above is in conformity with the set of declared performance/s. This declaration of performance is issued, in accordance with Regulation (EU) No 305/2011, under the sole responsibility of the manufacturer identified above.

Signed for and on behalf of the manufacturer by:

Ferruccio Zambaiti at Albino on 20/03/2018

ZAMBAITI PARATI S.p.A.
Via A. Pertini, 2 - Tel. 035/759111
24021 ALBINO (Bergamo)
P.VA e C.F.: 01780680169

Cap. Sociale € 5.500.000,00 int. vers. - REA BG n° 237168 - Reg. Imp. BG, Cod. Fisc. e P. IVA 01780680169 - Codice Meccanografico BG 002676

CAMPIONE GRATUITO ESENTE DA DOCUMENTO DI TRASPORTO

ISO 9001 BUREAU VERITAS Certification

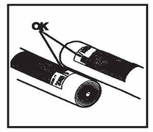

- Verificare che il numero di bagno sia uguale.
- Check batch numbers are the same.
- Vérifiez que les numéros de bain correspondent.
- Achten Sie auf gleiche Anfertigungsnummem.
- Sprawd numery wzoru i serii s takie same.
- Убедитесь в том, что на всех рулонах нанесен одинаковыл номер партии.

- Rimuovere la vecchia tappezzeria.
- Remove all old wallcovering.
- Enlevez le revêtement mural ancien.
- Alte Tapeten entfernen.
- Usun star tapet.
- Удалить старые обои.

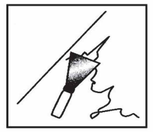

- Preparare le superfici.
- Prepare all surfaces.
- Préparer les surfaces.
- Untergrund vorbereiten.
- Przygotuj cian (wyrównanie, gruntowanie).
- Зачистите стены.

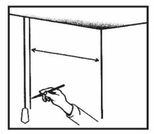

- Partendo dall'angolo, misurare una distanza di poco inferiore alla larghezza del telo.
- Drop a plumb line at this point, mark the wall along this line as a hanging guide.
- A l'aide d'un fil à plombe tirez une ligne qui servira de guide.
- Man muss am Winkel beginnen, um die Entfernung, die etwas niedriger als die Breite des Tuch ist, messen zu Können.
- Przy pomocy pionu wykre l lini bazow.
- При помощи отвеса отметьте вертикальную линию, по которой следует клеить первое полотнище.

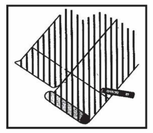

- Tagliare i teli a lunghezza più che sufficiente.
- Cut lenghts, allow extra for trimming.
- Couper les lés en prévoyant une longueur plus grande que la hauteur nécessaire.
- Bahnen in ausreichenderLänge zuschneiden.
- Potnij tapet na pasy z zachowaniem naddatku na przyci cie.
- При разрезании обоев оставить снизу и сверху запас.

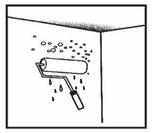

- Applicare la colla direttamente al muro.
- Apply paste to the wall.
- Appliquez la colle sur le mur.
- Wand einkleistern.
- Posmaruj klejem cian.
- Нанести клей на стену.

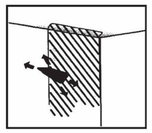

- Posare il telo asciutto e stendere con una moderata pressione.
- Unroll the wallpaper and press the prepared wall.
- Poser le papier à sec et chasser les bulles d'air.
- Tapetenbahnen trocken einlegen und andrücken.
- Such tapet poló na posmarowan klejem scian.
- Приложите к стене сухое полотнище, затем аккуратно прижимате его.

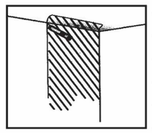

- Tagliare i bordi
- Trim the edges.
- Araser les bords.
- Kanten beschneiden.
- Odetnij na kraw dziach styku ciany i sufitu.
- Края обоев обрезаются.

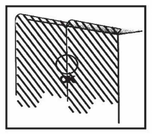

- Applicare il telo successivo seguendo l'eventuale rapporto del disegno
- Apply next lenght - matching the pattern.
- Poser le lé suivant au raccord avec le dessin.
- Nächste Bahn ansetzen - auf Musteransatz achten.
- Nalo y nast pny pas tapety z uwzgl dnieniem raportu wzoru.
- Приложите следующее полотнище, не забудьте определить нужно ли Вам подгонять рисунок обоев на стыках.

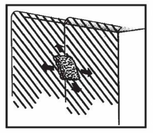

- Rimuovere eventuali eccessi di colla.
- Remove excess paste.
- Enlever le surplus de colle.
- Überflüssigen Kleister abwischen.
- Usun nadmiar kleju (wilgotn g bk lub ciereczk).
- Удалить остатки клея сразу.

CONSIGLI PER POSA E MANUTENZIONE

Assicurarsi che i rotoli abbiano lo stesso numero di fabbricazione e che il materiale sia sufficiente a completare il lavoro. Incollare il muro con una colla per non-woven. E' responsabilità del cliente verificare la tonalità del colore e le perfette condizioni dei rolli. Non si accettano reclami per più di 3 teli per merce difettosa applicata alla parete.

NOTICE DE POSE

Vérifier la conformité des rouleaux entre eux. Les murs doivent être sains, secs, normalement absorbants et unifiés pour éviter les transparences. Encoller le mur avec une colle pour intissé. Poser le papier à sec car il est inerte. Maroufler du centre vers l'extérieur pour chasser les bulles d'air. En cas de réclamation (défaut ou vice caché) notre responsabilité sera limitée au remplacement de 3 lés maximum.

HANGING AND MAINTENANCE INSTRUCTIONS

Ensure that batch numbers and letters printed on the labels are the same and that you have sufficient rolls to complete the job. Paste the wall with an adesive for non-woven. It is customers responsability to ensure that rolls are colour matched and in perfect condition. No claim can be allowed for faulty goods hung in excess of one roll.

VERARBEITUNGSANLEITUNG

Es ist zu prüfen, ob alle Rollen die selbe Anfertigungsnummer haben und genug Material zur Vollendung der Arbeit vorhanden ist. Wand mit speziellem Vlieskleber einstreichen und Ware trocken in das Kleberbett einlegen. Der Kunde trägt die Verantwortung für die Kontrolle des Farbtons und den perfekten Zustand der Rollen. Es werden keine Reklamationen über defekte Ware für mehr als 3 geklebte Bahnen akzeptiert.

PRZYKLEJANIE I UYTKOWANIE

Sprawdź czy serie i numery rulonów sa jednakowe i czy posiadasz wystarczajca ilosc rolek. Przy tapetach o podlozu flizelinowym klejem nalezy posmarowac sciane, nie tapete.Odpowiedzialnosc za sprawdzenie czy rolki sa dobrane kolorystycznie i sa w idealnym stanie, obciaza klienta. Nie beda uznawane reklamacje wadliwego towaru jezeli zostana przyklejone do cian rolki w ilosci wiekszej niz 1 wadliwa rolka.

Советы по наклеиванию

Убедитесь, что на всех Ваших рулонов нанесен одинаковый цифровой и буквенный код, и у Вас имеется необходимое количество рулоновю. Наклеиваете стену клеем для флезилиновых обоев
Покупатель несет ответственность за правильный подбор цветовых оттенков. При наличии значительных изъянов производитель возменает расходы по наклеиванию не более чем трёх полотнищ.